

SAN FRANCISCO POWELL STREET CABLE CAR

Disassembly of Rokuhan Shorty SA-01 Chassis (not included)

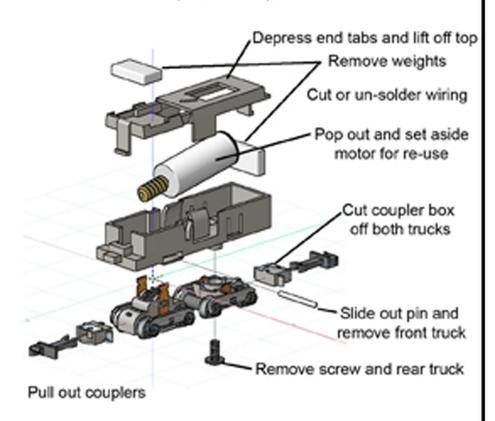


Sand detail off face of side frames; paint black

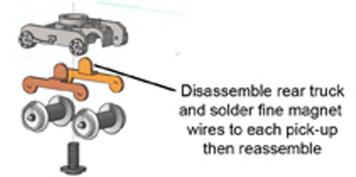


SAN FRANCISCO POWELL STREET CABLE CAR

Cable Car Assembly

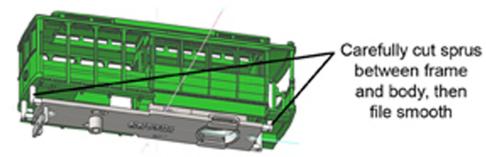

Tap body mounting screw holes for 00-90 screws Clean parts in isopropyl alcohol, dry, and paint. Add glazing

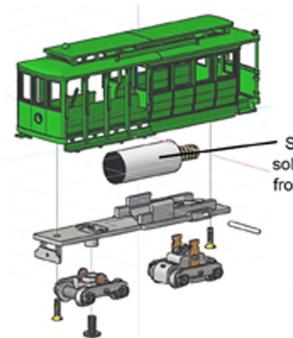

Attach trucks, then insert frame into body and attach with two 00-90 screws (not included) Note: Assembled cable car will have Shorty trucks and motor reversed, so test and verify wiring polarity.

Snap motor into frame;
solder wires from rear and
front trucks to motor leads

Recommended: Add 240 ohm resistor between motor and right side truck pickup wiring

Recommended: Fabricate and add metal weights to interior of car body.









